


User manual

Front loading washing machine

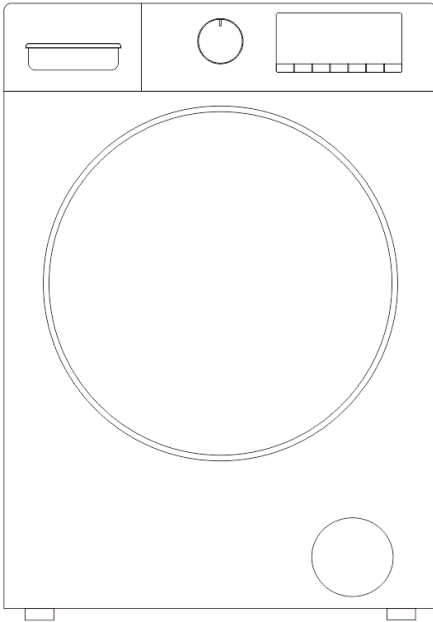

Model:
NWWM814W



Welcome to Your New washing machine!

Congratulations on your selection of a new **New World** brand washing machine for your laundry needs. We are confident you will enjoy the superior performance and reliability.

Please do not hesitate to contact our Customer Service department if you have any questions or comments with your new washing machine.

Thank you for choosing **New World** brand washing machine.

Contents

Safety instruction. 2-3-4-5

Safety instruction

Disposal

Installation. 6-7-8-9-10-11-12

Unpacking,

Carrying the appliance

What's included

Removing the transport bolts

Choosing the Right Location

Levelling the appliance

Connecting the electricity and water supplies

Technical date

Description of the washing machine. 13-14

Control panel

Display

Preparing and sorting laundry. 15-16

Preparing the laundry

Sorting the laundry according to colour and degree of soiling

Sorting laundry according to their care label specifications

Various cycles and functions. 17-18-19-20

Table of wash cycles

Various cycles

Various functions

How to use the appliance. 21-22-23

Before loading your first load of laundry

Daily use

Preparing the laundry

How to use the washing machine

Care and maintenance. 24-25-26

Cutting off water and electricity supplies

Cleaning the appliance's exterior

Cleaning the drum

Descaling the washer

Caring for the door and drum of your appliance

Checking the water inlet hose

Cleaning the detergent dispenser

Cleaning the mesh filter in the water supply hose

Cleaning the drain pump

Troubleshooting. 27-28-29

Product fiche. 30-31-32

Safety instruction

Before using the washer, read these safety instructions. Keep them nearby for future reference. These instructions and the washer itself provide important safety warnings, to be observed at all times. The manufacturer declines any liability for failure to observe these safety instructions, for inappropriate use of the washer or incorrect setting of controls.

1 Very young children (0-3 years) should be kept away from the washer. Young children (3-8 years) should be kept away from the washer unless continuously supervised. Children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this washer only if they are supervised or have been given instructions on safe use and understand the hazards involved. Children must not play with the washer. Cleaning and user maintenance must not be carried out by children without supervision. Keep all laundry aids (including detergent, bleach, fabric softener, etc.) out of the reach of children.

PERMITTED USE

1 **CAUTION:** The washer is not intended to be operated by means of an external switching device, such as a timer, or separate remote controlled system.

1 This washer is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed & breakfast and other residential environments.

1 Do not load the washer above the maximum capacity (kg of dry cloth) indicated in the program table.

1 This washer is not for professional use. Do not use the washer outdoors.

1 Do not use any solvents (e.g. turpentine, benzene), detergents containing solvents, scouring powder, glass or general purpose cleaner, or flammable fluids; do not machine wash fabric that have been treated with solvents or flammable liquids.

1 Do not machine wash fiberglass materials (such as curtains and windows coverings that use fiberglass materials). Small particles may remain in the washer and stick to fabrics in subsequent wash loads causing skin irritation.

1 Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

1 Remove all objects from packets such as lighters and matches.

1 Make sure there is no water in the drum before opening the door.

1 Never wash the carpet in the washer.

1 Keep pets away from the washer.

1 Exercise caution when pumping out hot detergent solution.

1 Do not fill water during washing cycle manually.

1 Please close the loading door correctly, if it is difficult to close it, please check if the laundry is caught in the door.

1 Water may reach very high temperatures during the wash cycle.

1 Do not reach into the washer if the wash drum is moving.

1 Do not temper with the controls.

1 Never open the door forcibly or use it as a step.

1 Do not allow anyone to climb, lean or hang on any part of the washer including any protruding components such as the appliance door or a pullout shelf.

Safety instruction

INSTALLATION

1 The washer must be handled and installed by two or more persons – risk of injury. Use protective gloves to unpack and install – risk of cuts.

1 The washer must be installed and operated in a room with the drain.

1 Installation, including water supply (if any) and electrical connections and repairs must be carried out by a qualified technician. Keep children away from the installation site. After unpacking the washer, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-Sales Service. Once installed, packaging waste (plastic, Styrofoam parts etc.) must be stored out of reach of children – risk of suffocation. The washer must be disconnected from the power supply before any installation operation – risk of electric shock. During installation, make sure the washer does not damage the power cable – risk of fire or electric shock. Only activate the washer when the installation has been completed.

1 Do not install the washer where it may be exposed to extreme conditions, such as: poor ventilation, temperatures below 5°C or above 35°C.

1 Do not expose the washer in the place with causticity or explosibility gas.(e.g. dust, steam and gas, etc.)

1 Do not install the washer in a bathroom or a room very wet.

1 The washer should not be installed in an outdoor environment, not even where the area is sheltered, because it may be very dangerous to leave it exposed to damp, rain and thunderstorms.

1 When installing the washer make sure that the four feet are stable and resting on the floor, adjusting them as required, and check that the appliance is perfectly to level using a spirit level.

1 The washer must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washer, in such way that a full opening of the washer door is restricted.

1 After installation of the washer, wait a few hours before starting it so that acclimates to the environmental conditions of the room.

1 Make sure that the ventilation openings in the base of the washer (if available on your model) are not obstructed by a carpet or other material.

1 When moving, do not lift the washer by the knobs or detergent drawer, without lifting it by the worktop or top lid; during transport, never rest the door on the trolley.

1 The washer is fitted with transport bolts to prevent any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed. After their removal, cover the openings with the 4 enclosed plastic caps.

1 Connect the water inlet hose(s) to the water supply in accordance with the regulations of your local water company.

1 Use only the new water inlet hose(s) supplied with the washer to connect the washer to water supply. The old water inlet hose(s) should not be reused.

1 The supply water pressure must be in the 0.03—1.0 MPa range.

Safety instruction

ELECTRICAL WARNING

It must be possible to disconnect the washer from the power supply by unplugging it if plug is accessible, or by a multi-pole switch installed upstream of the socket in accordance with the wiring rules and the washer must be earthed in conformity with national electrical safety standards.

When the washer is installed, the mains socket must be within easy reach.

When heating, the maximum current of the washer is 10A, so please make sure that the power supply system (voltage, current and the cable) is applicable to the load of the applied appliance.

In order to ensure your safety, you must plug the cable into a socket which connected to earth. And please check your socket to make sure that it is connected with reliable earth correctly.

Do not use extension leads, multiple sockets or adapters.

The electrical components must not be accessible to the user after installation.

Do not operate this washer when you are wet or barefoot.

Do not operate this washer if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.

If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard – risk of electric shock.

Disconnect the power cord by grasping the plug, not the cord.

The washer should not be installed in an outdoor environment, not even where the area is sheltered, because it may be very dangerous to leave it exposed to damp, rain and thunderstorms.

CLEANING AND MAINTENANCE

WARNING! Ensure that the washer is switched off and disconnected from the power supply and turn off the water tap before performing any maintenance operation; never use steam cleaning equipment – risk of electric shock.

Use caution when draining hot water from the drum such as during pump maintenance or when using emergency door open procedure.

SERVICE

Do not repair or replace any part of the washer unless specifically stated in the user manual. Use only authorized After-sales Service. Self or non-professional repair may lead to dangerous incident resulting in live or health threatening and/or significant property damage.

In the event of fault and/or malfunction, turn off the washer, close the water tap and do not tamper with the machine. Immediately contact the Customer Service Centre and only use original spare parts. Failure to observe these instructions may jeopardise appliance safety.

Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service personnel – Do not contact the following parts while the appliance is energized: Control board, heat sink, motor, inlet valve and pump.


Always unplug the washer from the power supply before attempting any service. Disconnect the power cord by grasping the plug, not the cord.

Before the washer is removed from service or discarded, remove the door to prevent children from playing or hiding inside. Also remove the power cord/plug.

WARNING! The company denies all liability if and when these norms are not respected.

Safety instruction


DISPOSAL OF PACKAGE MATERIALS

The packaging material is 100% recyclable and is marked with the recycle symbol .

The various parts of packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

DISPOSAL OF HOUSEHOLD APPLIANCES

This washer is manufacture with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. For further information on the treatment, recovery and recycling of household electrical appliances, contact your local authority, the collection service for household waste or the store where you purchased the appliance. This washer is marked in compliance with European Directive 2012/19/EU. Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent negative consequences for the environment and human health.

The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

Installation


1 This instruction manual should be kept in a safe place for future reference. If the washer is sold, transferred or moved, make sure that the instruction manual remains with the machine so that the new owner is able to familiarize himself/herself with its operation and features.

1 Read these instructions carefully, they contain vital information relating to the safe installation and operation of the appliance.

Follow these instructions carefully to ensure proper installation of your washer and to prevent accidents when doing laundry.

Unpacking

1. Remove the washer from its packing.
2. To remove the cushion bottom of the packing materials, do not tip the washer over on its front side. When you lay the washer down to remove the carton base, protect the side of the washer and lay it down carefully. Never lay your washer on its back or front.
3. Make sure that the washer has not been damaged during shipping. Make sure you have received all of the items shown on the next page. If your washer was damaged during shipping, or you do not have all of the items. If it has been damaged, contact the retailer and do not proceed any further with the installation process.

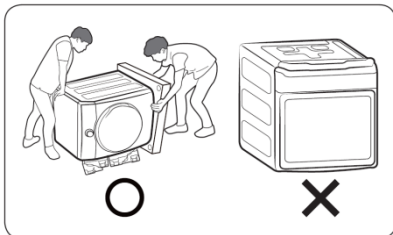

1 WARNING

Packing materials can be dangerous to children. Keep all packing material (plastic bags, polystyrene, etc.) well out of children's reach.

Carrying the washer

- 1 Don't do it by yourself alone.

Tilt the washer backward.

One person stands behind the washer and holds the protruding part of the top plate, while the other person holds the bottom of the washer in front.




To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.

When moving the washer, **do not** allow the front of the washer to contact the trolley frame.





Installation

What's included

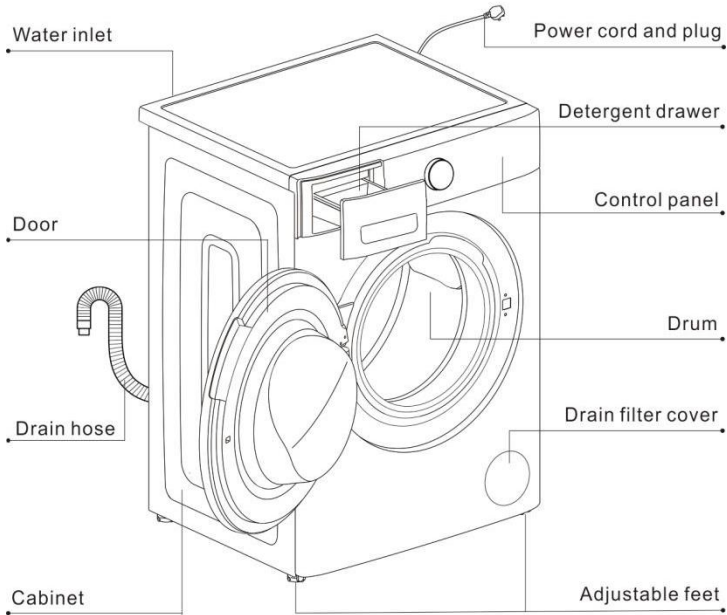● Description of the parts



● Accessories

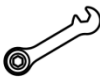User manual	Water inlet hose	Wrench	Cover caps
1 copy	1 pcs	1 pcs	4 pcs
			

Installation


Removing the transport bolts

1 CAUTION

DAMAGE TO THE APPLIANCE OR INJURY POSSIBLE

- The washer is secured for transport with transport bolts. Transport bolts that are not removed can damage the drum during operation of the washer, the washer will vibrate, and it will be much noisier during spin cycles if the transport bolts are not removed before use. Be sure to remove all 4 transport bolts completely before first use. Keep the transport bolts. If a pedestal was purchased with the washer, it must be installed first, prior to removing the transport bolts. Please consult the pedestal installation instructions.
- In order to prevent transport damage during later transport, be sure to re-install the bolts before transport.

1. Undo the four transport bolts **A** by the wrench (supplied) and remove them.
2. Remove the four spacers **B**. They will fall to the floor when you tip the machine.
3. Insert the four cover caps **C** which will find in the plastic bag containing the accessories.

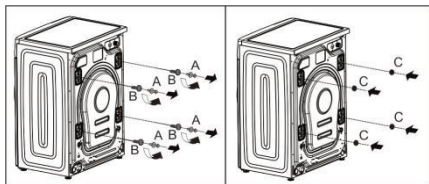

Keep all the parts in safe place: you will need them again if the washer needs to be moved to another location.

NOTE

- Transport the washer for the prevention of breakage as below:
 - The transport bolts are reinstalled.
 - The power cord is secured to the back of the washer.

Choosing the right location

● Locations the appliance is not to be installed


- In a damp place or where the washer may be exposed to rain, etc.(As this could cause electric shock or fire)
- Locations that are uneven, or unstable (As this could cause vibration and noise).
- In direct sunlight (As this could cause malfunction or deformation)
- Within, or on top of, unstable surfaces, including but not limited to benchtops, timber shelving, or cabinets.

- 1 **CAUTION:** Do not install where temperatures may reach freezing

● Set-in Installation

- Install the washer with easy access to the power plug and socket.
- Install the washer where there is enough space around it.

- (a) 3cm or more above
- (b) 5cm or more behind
- (c) 2cm or more on the left side
- (d) 2cm or more on the right side
- (e) 64cm or more

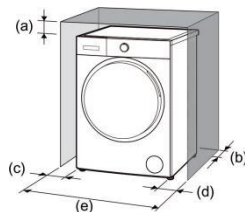

- 1 **CAUTION:** Do not let metallic portions of the washer come into contact with metal sinks or other appliances.

Installation

Leveling the washer

Importance of leveling the washer

The washer uses high spin speeds to remove water at the end of the wash cycle. It is important that the washer is level and that the washer feet press with equal pressure against the floor. This will help assure the quietest, most vibration-free use of the washer.

Follow these steps:

1. Install the washer on a level and solid surfaces. Preferably in a corner of a room.
2. If the floor is uneven (or out of level) adjust the washer feet as required to level the washer. Do not place anything under the washer feet to help level the washer.
3. Extend the washer feet no more than is necessary. The more the feet are extended, the more vibration the washer will experience. Start with the washer feet turned all the way in and adjust each foot as necessary.
4. Use a bubble level (no supplied) to check the top of the washer to make sure it is level side to side and front to rear.
5. Press down on each corner of the washer top to make sure the washer doesn't "wobble". There should be no "give" or movement. All the washer feet should press equally against the floor. This is just as important as the washer being level to prevent vibration.
6. When the washer is level and does not wobble, lock the washer feet in place by tightening the locknuts against the washer bottom. Be sure to do this without changing the height of the foot (hold the foot while tightening the locknut)

2. Turn the washer foot to extend it downward as far as necessary to raise the corner of the washer the correct amount to level the washer.
3. When the height of the foot is correct, use the wrench (supplied) to tighten the locknut against the washer bottom. The locknut should be tightened against the bottom of the washer to lock the foot in place.



Procedure for adjusting the appliance feet:

1. After determining which the washer feet need to be extended, have someone lift up on the washer slightly to take pressure off the foot to be adjusted.

Installation


Connection the electricity and water supplies

Connecting the water inlet hose

1. Connect one end of the water inlet hose to a cold water tap and tighten by hand (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.



2. Connect the other end of the water inlet hose to the water inlet valve on the rear of the appliance and tighten by hand.

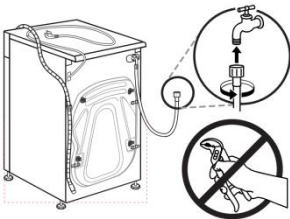


3. Turn on the tap slowly and make sure there are no leaks.

- 1 Do not twist, squash, modify or cut the hose.
- 1 Tighten the end of the hose firmly by hand.
- 1 The supply water pressure must be in the 0.03—1.0MPa range. If the water pressure exceeds this value, please fit a pressure reducing valve.
- 1 If the hose is not long enough, contact a specialized shop or an authorized technician.
- 1 Never use second-hand water inlet hose.
- 1 Use the new water inlet hose supplied with the washer.

Connecting the drain hose


Height of drain point

Height difference between the floor and drainage point: min. 60cm(24 in.) and max. 100cm(39 in.).

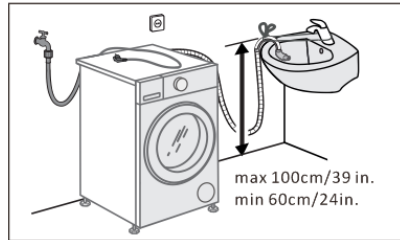


Types of drainage hookups

■ Standpipe

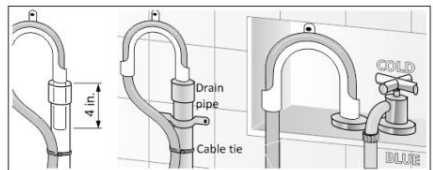

Attach the drain hose to the elbow (no supplied, available from our Customer Service Department). Position the elbow on the drain hose 4" from end of the hose as shown. Insert this section of the drain hose into the drain pipe. Secure the elbow and hose with a nylon tie strap or the equivalent to keep the hose from coming out of the drain pipe during use.

■ Sink siphon

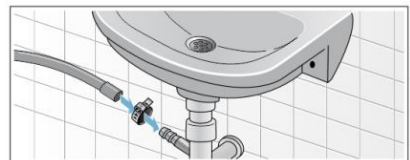

Secure the drain hose to the sink siphon using a $\varnothing 0.9-1.6$ in.(20-44mm) hose clip (available from a hardware store).


Installation

1 Before connecting the drain hose ensure that any blanks or removable ends have been taken off the spigot.

■ Wash Basin

Make sure that:

- There is no stopper in the sink drain.
- The end of the drain hose does touch the discharge water.
- The sink drain is free flowing and not partially clogged.

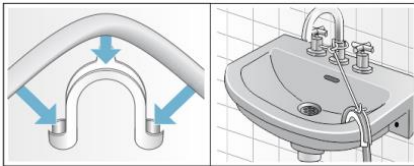

Attach the drain hose securely to the wash basin.

1 Do not twist, pull out or bend the drain hose.

1 We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150cms in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the washer to self-syphon ie. continuously empty as it is filling.

Electric connection

Before plugging the washer into the mains socket, make sure that:

- The socket is earthed and in compliance with the applicable law.
- The socket is able to sustain the appliance's maximum power load indicated on the Technical Data Plate fixed on the machine.
- The supply voltage is included within the values indicated on the Technical Data Plate fixed on the washer.

- When heating, the maximum current of the washer is 10A, so please make sure that the power supply system (voltage, current and the cable) is applicable to the load of the applied appliance.
- The socket is compatible with the washer's plug. If this is not the case, replace the socket or the plug by a qualified electrician.

1 WARNING----THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

Replace the supply cable:

If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard – risk of electric shock.

Disposing of the plug:

Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket.

Disposing of the appliance:

When disposing of the washer please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of the plug as described above.

1 The washer is not intended to be operated by means of an external switching device, Such as a timer, or separate remote controlled system.

1 When the washer is installed, the mains socket must be within easy reach.

1 Do not use extension cables, multiple sockets or adapters.

1 To remove the plug from the socket, grasp the plug firmly and pull it out. Do not pull at the cable.

Installation

1 The electrical components must not be accessible to the user after installation.

1 Do not connect the machine to electrical outlets while your hands are wet or damp.

1 Do not operate this appliance when you are wet or barefoot.

1 Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.


1 **WARNING!** The company denies all liability if and when these norms are not respected.

Technical data

Model	NWWM814W
Rated washing capacity (kg)	8.0
Rated voltage	220~240V
Rated frequency	50Hz
Rated power (W)	2000
Washing noise level (dB)	62
Spinning noise level (dB)	76
Spin speed (rpm)	1400
Water pressure (MPa)	0.03 ~ 1.0
Degree of waterproof	IPX4
Net weight (kg)	60
Outer dimension (WxDxH mm)	600 X 520 X 847

Description of the appliance

Control panel

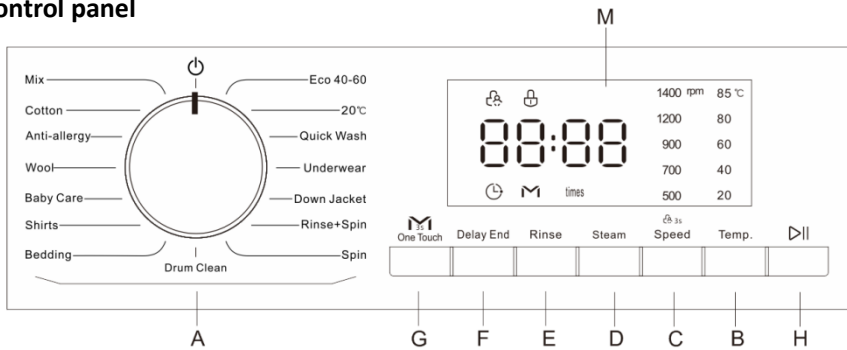

A---WASH CYCLE SELECTOR knob: Used to set the desired wash cycle (see “Table of wash cycles”).

- **OFF position** : Turn the Linear mark on the wash cycle selector knob under the symbol “” to switch the machine off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

B---TEMP. button: Press to change the water temperature for the current cycle. There are five temperature values on the display. When a temperature value is selected, the corresponding temperature value indicator light illuminated on the display.

C---SPEED button: Press to change the spinning speed for the current cycle. There are five spinning speed values on display. When a spinning speed value is selected, the corresponding spinning speed value indicator light illuminated on the display.

- **CHILD LOCK** function: When the cycle is running, if you want to activate the control panel lock, please press and hold the **SPEED** button for approximately 3 seconds.

For a detailed description, see→ *Various cycles and functions*.

- **Cancelling the buzzer:**

Press and hold the **SPEED** button and **ONE TOUCH** button together at the same time for at least 3 seconds, you can turn off the buzzer that sounds during the washing cycle running.

For a detailed description, see→ *Various cycles and functions*.

D---STEAM button: Press to set the STEAM wash cycle.

For a detailed description, see→ *Various cycles and functions*.

E---RINSE button: Press to change the rinse count for the current cycle, the changed rinse count appears on digital display.

F---DELAY END button: Press to set the wash cycle end (Delay end) time.

For a detailed description, see→ *Various cycles and functions*.

G---ONE TOUCH button: Press to set the **ONE TOUCH** wash cycle.

For a detailed description, see→ *Various cycles and functions*.

H---START/PAUSE button:


- Long press the button to start a wash cycle.
- Once the cycle has begun, if you want to pause the wash cycle, please long press the button again. If the **DOOR LOCK** indicator is not illuminated, the door may be opened, you can add or take out laundry.

To start the wash cycle from the point at which it was interrupted, press the button again.

Description of the appliance

M---Display

The display is useful when programming the machine and provides a great deal of information.

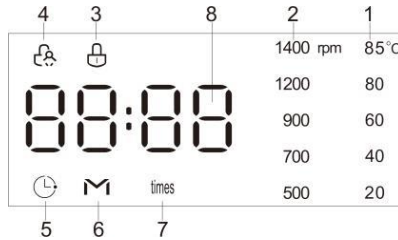

1---Temperature indicator

When a program is selected, the default temperature value of this program will appear on the display, with the corresponding temperature indicator light illuminated.

You can change the temperature value by pressing the **TEMP.** button. When a temperature value is selected, the corresponding temperature value indicator light is illuminated on the display. If all temperature value indicator lights are off, it indicates the washer is using only cold water without utilizing the washer's heater in this program.

2---SPINNING SPEED indicator

When a program is selected, the default spinning speed value of this program will appear on the display, with the corresponding spinning speed indicator light illuminated.

You can change the spinning speed value by pressing the **SPEED** button. When a spinning speed value is selected, the corresponding spinning speed value indicator light is illuminated on the display. If all spinning speed indicator lights are off, it indicates the washer does not spin after the final drain process in this program.

3---DOOR LOCK indicator

The lit symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before opening the door.



To open the door while a cycle is in progress, press the **START/PAUSE** button, if the **DOOR LOCK** symbol is switched off the door may be opened.

4---CHILD LOCK indicator

The lit symbol indicates the **CHILD LOCK** function is activated, the control panel is locked (apart from the **OFF** position on the control panel).



5---DELAY END indicator

The lit symbol indicates the **DELAY END** function is activated. The countdown to the end of the selected wash cycle will appear on the digital display.



6---ONE TOUCH indicator

The lit symbol indicates the **One Touch** wash program is selected. There are three ways to set the **One Touch** wash program.



7---RINSE COUNT indicator

When the symbol is lit, you can select the rinse count, the selected rinse count will appear on the digital display.



8---DIGITAL DISPLAY

- 1) Wash cycle remaining time
- 2) Delay end time
- 3) DIY time
- 4) Rinse count
- 5) Fault code






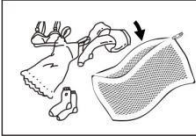
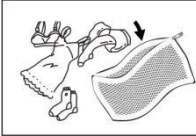
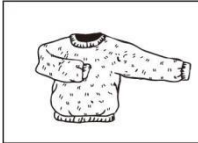
Preparing and sorting the laundry

Preparing the laundry

Notice: Damage to the washer/fabric



Foreign objects (e.g. coins, paper-clips, needles, nails) may damage the laundry or components in the washer.

Therefore, note the following tips when preparing your laundry:

- Remove any loose items or metal objects, such as safety pins, paper clips, etc. from the laundry. 
- Brush sand, coins, etc. out of pocket and cuffs. 
- Close zips and button up cushion covers, duvet covers, etc. 
- Remove curtain runners, or secure them in a net bag. 
- Particularly delicate items; such as tights or lace curtains, or smaller items, such as tiny socks or handkerchiefs, should only be washed in a net bag or pillow case. 
- Some items are best turned inside out. These included knitwear, trousers, T-shirts and sweatshirts. 
- Make sure that the wire-cup bras are machine washable.
- ! Make sure that wire-cup bras in a pillow case which can be securely closed with a zip or button. If the wire works itself out of the cup it may fall through the holes of the drum and cause extensive damage.

Sorting the laundry according to colour and degree of soiling

Sort laundry items according to color, degree of soiling and recommended wash temperature range.

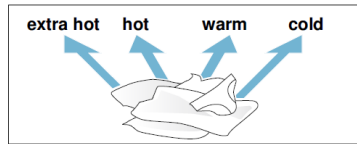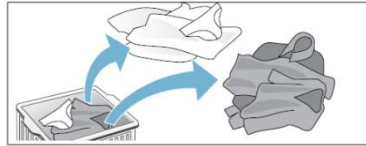

- Items of clothing can become discoloured.
- Never wash new multi-coloured items together with other items.
- Wash white items separately from colored items. Otherwise, white items may tend to become grey.

Degree of soiling

- **Light soiling**
No visible soiling or stains, but may have absorbed some odor. This could include light weight summer clothes such as T-shirts, shirts, or blouses worn only once. Also to freshen bed linen or guest towels
- **Normal soiling**
Visible soiling and/or a few light stains. This could include clothing such as T-shirts, shirts, or blouses that have been sweated in or worn several times. Also tea towels, hand towels or bed linen used for up to one week or more. Curtains without stains that have not been washed for up to a half year.
- **Heavy soiling**
Visible soiling and stains. This could include kitchen towels, fabric napkins, baby bibs, children's outer clothing or football jerseys and shirts stained with grass or dirt. It could also include working clothes such as overalls and jeans and other clothing worn for outside work and activities.

Preparing and sorting the laundry

Sorting laundry according to their care label specifications

The symbols on labels of your garments will help you in choosing the suitable wash program, the right temperature, wash cycles, and ironing methods. Don't forget to give a glance to these useful indications!

 Wash type	 Machine wash, normal/cotton	 Machine wash, permanent press	 Machine wash, delicate/gentle	 Hand wash only	 Do not wash	 Do not wring
 Water Temp.	 Water temperature 30°C	 Water temperature 40°C	 Water temperature 50°C	 Water temperature 60°C	 Water temperature 70°C	 Water temperature 95°C
 Bleach	 Any bleach	 Non chlorine bleach	 chlorine bleach	 Do not bleach		
 Tumble Dry type	 Normal/Cotton Heavy duty	 Permanent Press/Wrinkle resistant	 Delicate/Gentle	 Do not tumble dry		
 Tumble dry temp.	 High heat	 Medium heat	 Low heat	 No heat		
 Dry type	 Hang to dry	 Drip dry	 Dry flat	 Dry in the shade		
 Iron	 High heat	 Medium heat	 Low heat	 Do not Iron		
 Dryclean	 Any solvent	 Perchloroethylene solvent	 Petroleum solvent	 Do not dryclean		

Various cycles and functions

Table of wash cycle

Wash cycle	Temp °C (Max)	Max.Lo ad (kg)	Description	Kind of detergent		
				Detergents		softener
				Universal	Special	
Mix	60	8	For blended fabrics, e.g. cotton, linen and synthetic fibres.	L / P	---	O
Cotton	60	8	For daily items of cotton, linen and cotton blends.	L / P	---	O
Anti-allergy	85	3	For clothes that need to remove mites and allergens.	L / P	---	O
Wool	40	1	For machine washable wool and wool blend clothes.	---	L / P	O
Baby care	85	5	a cycle designed for dirt typical of children's garments in that it effectively removes any traces of residual detergent.	L / P	L	O
Shirts	60	3	For shirts and women's blouses.	L / P	L	O
Bedding	60	6	For large items such as blankets, curtains and bedspreads.	L / P	---	O
Eco40-60	40	8	Energy efficiency test program.	L / P	---	O
20°C	20	2	For small amount of clothes that are easy to fade .	L / P	---	O
Quick Wash	40	1	For small amount or lightly soiled garments.	L / P	---	O
Underwear	60	5	For underwear.	L / P	L	O
Down Jacket	40	2	For down jacket which can be washed by machine.	---	L / P	O
Rinse +Spin	---	8	Combines a rinse and spin for loads requiring an addational rinse cycle. Also use for loads that require rinsing only.	---	---	O
Spin	---	8	This cycle uses a spin to shorten drying times for heavy fabrics or special-care items washed by hand.	---	---	---
Drum clean	85	---	Clean the drum by removing dirt and bacteria from the drum. Make sure the drum is empty.	---	---	---
One-Touch	40	5	Special cycle which can be started simply by pressing the ONE-TOUCH button.	L / P	---	O

- L=gel/liquid detergent P=Powder detergent O=Optional ---=No
- If using liquid detergent, it is not recommended to activate the time delay.
- Please follow the dosage recommendation on the powder or liquid detergent package.
- We recommend by using:
 Laundry powder 20°C to 80°C
 Wool detergent 20°C to 40°C

Various cycles and functions

Various cycles

ONE TOUCH wash cycle

ONE TOUCH wash cycle can intelligently detect the weight of laundry and match different washing time and temperature to realize intelligent washing.


"**Auto**" is displayed in the detection stage after the cycle is started, and the **ONE TOUCH** wash cycle can be entered by the following three methods.

- When the washer is OFF, press and hold the **ONE-TOUCH** button for at least 3 seconds, the washer will run the M-Smart wash cycle directly, with **ONE-TOUCH** indicator light **M** illuminated.
- When the washer is ON, press and hold **ONE-TOUCH** button for at least 3 seconds, the washer will run the **ONE-TOUCH** wash cycle directly, with **ONE-TOUCH** indicator **M** light illuminated.
- When the washer is ON, short press the **ONE-TOUCH** button, the **ONE-TOUCH** indicator light **M** illuminated, and then press the **START/PAUSE** **▶||** button, the washer runs the **ONE-TOUCH** wash cycle.

Special wash cycles

Baby care : a cycle designed for dirt typical of children's garments in that it effectively removes any traces of residual detergent.

Down Jacket : a cycle to wash single downs (the weight of which should not exceed 2.0kg), cushions or clothes padded with goose down such as puffer jacket, use this special wash cycle. We recommend that down are placed in the drum with their edges folded inwards (*see figure*) and that no more than 3/4 of the total volume of the drum is used. To achieve the best results, we recommend that a liquid detergent is used and placed inside the detergent dispenser drawer.

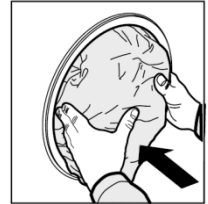



Wool : a cycle designed for wool fabrics.

- Before washing, please confirm that the clothes have the washing label of "machine washable".
- After the procedure is completed, please take out the clothes quickly, shape and dry them to avoid deformation caused by being placed in the drum for too long.
- To prevent clothes from being damaged, the water temperature should not exceed 40°C .
- For best results and to reduce the damage of clothes, Please use special detergent for wool and do not exceed 1.0 kg of laundry.

Various cycles and functions

Various functions

 Delay end

Press **DELAY END** button to set the program end (Delay end) time in one hour increments to a maximum of 24 h (hours). After selecting the desired washing program but before pressing the **START/PAUSE**  button, press the **DELAY END**  button until the desired time is displayed, e.g. 8h.

NOTICE: The cycle duration is included in the set **Delay End** time.

Here is an example of a 1hr: 30 min cycle time and an 8 h Delay end time.

8 h is displayed and count down (approximately 6 h: 30 min) until the washing cycle begins (at 1hr: 30 min) then the cycle duration 1: 30 is displayed and began. Total time approximately 8 hours.


The way to cancel **Delay End** function:

- Turn the wash cycle selector knob to reset the wash cycle.

NOTICE:


- **Delay End** function cannot be set some wash cycle.
- The end time of the wash cycle may be different from the actual reservation time depending on the water supply pressure, drainage, clothing type, water temperature and other conditions.

Child lock

1. Setting the **Child lock** function can avoid children's mis-operation and external interference to the washing procedure.
2. During operation, long press the **SPEED** button for 3 seconds to set or cancel the **Child lock** function.
3. After the **Child lock** function is set, the indicator light  is illuminated, the door cannot be opened, the control panel is locked and all buttons on control panel do not respond. You can turn off the machine by turn the wash cycle selector knob.

4. After the child lock function is set. When the machine is turned on again, the machine directly run the program before turning off the machine.



Canceling the buzzer

Press and hold the **SPEED** button and **ONE TOUCH**  button together at the same time for at least 3 seconds, you can turn off the buzzer that sounds during the washing cycle running.


● To activate the buzzer setting

Do the same operation as you did for cancelling. The buzzer setting is activated after one beep.

Add clothes during the program is running

When the program is running, long press the **START/PAUSE**  button to pause the machine, open the door and add clothes. After the operation is completed, close the door, long press the **START/PAUSE**  button again, and the machine continues to run.

NOTICE:

If the water level or water temperature in the drum is too high, the door lock indicator light  is illuminated, the door cannot be opened and the midway clothes filling function cannot be used.

Steam

A cycle designed for cotton clothes that are not easy to fade.

- Steam treatment can reduce the wrinkle of clothes, make the clothes reach the ideal humidity level, reach the most relaxed state, and make ironing easier.
- Steam treatment can get rid of the peculiar smell on clothes

Various cycles and functions

Load balancing system

The washer has an automatic detection system for eccentric load. In the process of spinning, if the clothes are unevenly distributed, the washer will level and adjust the clothes until the clothes are evenly distributed before spinning. If the clothes cannot be evenly distributed within the specified time, the washer will not spin to avoid severe vibration of the machine. At this time, you need to check whether the clothes are knotted or entangled, and select the "Spin" program after reorganizing the clothes. When washing less clothes, such as a pair of jeans, a sweater, a bath towel, etc., the machine may not complete the spinning process due to balance protection. Please wash the large and small clothes together as much as possible to make the clothes easier to release evenly and complete the spinning process smoothly.

NOTICE:

Due to the different types and materials of the laundry, the automatic adjustment and balance system of the washer may level and adjust the clothes for many times to prolong the spinning time. This is a normal phenomenon, not a machine failure.

How to use the appliance

Before loading your first load of laundry

Your new washer was tested before leaving the factory. This process involves running various wash cycles. As a result, a small amount of water may remain in the tub and drainage system. Run a **Drum Clean** 🌀 cycle with no laundry to clean the system before your first load of laundry.

First add 1 to 2 tablespoons of detergent to the chamber I. Then run the **Drum Clean** 🌀 cycle. Wait for the cycle to finish.

Daily use

Preparing the laundry

EMPTY POCKETS

- Coins, paper clips, etc. could damage the load and the washing machine components.
- Tissues will break down during the wash cycle and the fragments will have to be subsequently removed by hand.

CLOSE ALL ZIPPERS, BUTTONS, AND HOOKS. TIE ALL RIBBONS OR BELTS

- Insert the smaller garments (e.g. nylon hosiery, belts, etc.) and garments with hooks (e.g. braziers) into a fabric bag or a pillowcase with zipper. Remove any rings from curtains, or else place the curtains inside a fabric bag together with the rings.

FABRIC TYPE/SYMBOL ON THE WASH LABEL

- Cottons, mixed fibres, easy care/synthetics, wool, hand wash items.
- Color
Separate colored and white items. Wash new colored articles separate.
- Size
Wash items of different sizes in the same wash load, to improve washing efficiency and distribution of the articles in the drum.
- Delicates
Wash delicate items separately; they require gentle treatment.

How to use the washer

1. Load laundry

Open the door and load the laundry. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the “Table of wash cycle”. Overloading the machine will result in unsatisfactory washing results and creased laundry.

2. Close door

Make sure that no laundry gets stuck between door glass and rubber seal. Close the door so that you can hear it click shut.

3. Open water tap

Make sure that the washing machine is connected to the water mains. Open the water tap.

4. Set the desired program

Select the required program with **WASH CYCLE SELECTOR** knob. The duration of the wash cycle is shown on the display. The washing machine automatically displays the default temperature and spin speed settings possible for the selected program. Adjust the temperature and/or spin speed setting if needed with the relative buttons.

• Change temperature, if needed

Press the **TEMP.** button to progressively lower the temperature setting until cold wash has been set (all temperature value indicator light go out on the display). Pressing the button again sets the highest possible setting.

• Change spin speed, if needed

Press the **SPEED** button to progressively decrease the spinning speed until the spin cycle is turned off (all spinning speed value indicator light go out on the display). Pressing the button again sets the highest possible setting.

• Select options, if needed

Press the button to select the option; the respective option indicator on the display illuminates.

Press the button again to cancel the option; the respective option indicator extinguishes.


How to use the appliance

!If the selected option is incompatible with the program set, the incompatibility will be signaled by a buzzer and the corresponding indicator light will flash.

!If the selected option is incompatible with another previously set option, only the most recent selection will remain active.

5. Add detergent

Pull out the detergent dispenser and add detergent (and additives/softener) into the relative compartments as described below.

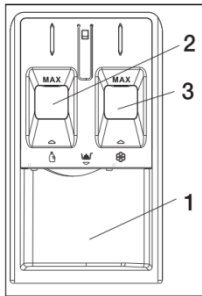

Compartment 1:
Powder washing detergent

Compartment 2:
Liquid washing detergent
The liquid detergent must not exceed the "MAX" level.

Compartment 3:

Additives (Softener. etc.) The fabric softener must not exceed the "MAX" level.

Observe the dosing recommendations on the detergent pack.

Correct dosing of detergent/additives is important, because:

- It optimizes the cleaning result.
- It avoids irritating residues of surplus detergent in your laundry.
- It saves money by avoiding waste of surplus detergent.
- It protects the washer by avoiding calcification of components.
- It respects the environment by avoiding unnecessary environmental burden.

! Do not use hand washing detergents because these create too much foam.


! Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60°C.

! Follow the instructions given on the detergent packing.

6. Delaying the end of a program

- To set a program to end at a later time, see the section "Control panel / DELAY END".

7. Start program

- Press the **START/PAUSE** ▷|| button. The relative indicator lamp illuminates, the door locks and the **DOOR LOCK**  indicator lights up.
- To avoid overflow, do not open the detergent dispenser during a running program anymore.
- The remaining program duration can vary. Factors like unbalance in the wash load, or foam formation, can have an effect on the program duration.


8. Change the settings of a running program, if needed

You can still change the settings while a program is running. The changes will be applied, provided the respective program phase has not finished yet.

To change the settings of a running program:


- Press **START/PAUSE** ▷|| button put the running program on pause.
- Change your settings.
- Press **START/PAUSE** ▷|| button again to continue the program.


If you have changed the program, do not add detergent for the new program.


To prevent that a running program is changed by accident (for instance by children), use the **Child lock**  function (see section "Control panel / SPEED").

How to use the appliance




Pause a running program and open the door, if needed

Press **START/PAUSE**  button to pause a running program.




Provided water level or temperature is not too high, the **DOOR LOCK**  indicator light turns off. You can open the door, for example to add more laundry, or to remove laundry which was loaded by mistake.

Press **START/PAUSE**  button again to proceed with the program.

9. Cancelling a running program, if needed

- Turn the wash cycle selector knob to **OFF** position  until the washer stops.
- If the water level and temperature are low enough, the door unlocks and may be opened.
- The door remains locked if there is water in the drum. To unlock the door, switch the washer on, select the **Spin** program and turn the spin option off by pressing the **SPEED**  button to set the spin cycle is turned off (all spinning speed value indicator light goes out on the display).
- Press **START/PAUSE**  button to running **Spin** program. The water is emptied and the door unlocks at the end of the program.

10. Switch off the washer after program End

- At the end of the cycle, the message “**End**” is shown on the display.
- The door can only be opened when the symbol **DOOR LOCK**  indicator turns off.
- Check that the **DOOR LOCK**  indicator is off, then open the door and take out the laundry.
- Turn the wash cycle selector knob to **OFF** position  to switch the washer off.

Leave the door ajar to let the interior of the washer to dry.

Care and maintenance

Your washer is designed to give you years of service. Observe the following instructions to maintain and protect your washer and keep it in top operating condition.

1 WARNING

RISK OF ELECTRIC SHOCK HAZARD

- To avoid risk of electric shock always disconnect the washer from the power outlet prior to cleaning.
 - Never clean the washer with a pressure washer.
-

Cutting off the water and electricity supplies

- Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washer and help to prevent leaks.
- Unplug the washer when cleaning it and during all maintenance work.

Cleaning the appliance's exterior

1 WARNING

RISK OF EXPLOSION

To avoid risk of explosion never clean the washer with flammable solvents.

Clean the washer's exterior surface when required as follows:

- Use hot soapy water or a mild (non-abrasive) cleaning agent.
- Rub dry with a soft towel.
- Remove residue immediately.
- Do not use high pressure spray.

Cleaning the drum

Metallic debris left in the drum can produce rust spots on the drum. Never use steel wool to try to remove these. Use a chlorine-free cleaning agent and follow the manufacturer's instructions.

Descaling the washer

Provided that you use correct amounts of detergent with your wash loads, descaling is not necessary. If descaling the washer drum does become necessary, please follow the descaling product manufacturer's instructions.

Small amounts of descaling agent can be used to remove white spots on the washer drum caused by lime or mineral deposits or small amounts of rust caused by metal objects left in the drum.

NOTICE: Descaling agents contain acids which may attack parts of the washer and may discolor the laundry.

Caring for the door and drum of your appliance

- Always leave the porthole door ajar in order to prevent unpleasant odours from forming.

Care and maintenance


Checking the water inlet hose

Check the water inlet hose at least once a year. If there are any cracks, it should be replaced immediately, during the wash cycle, water pressure is very strong and a cracked water inlet hose could easily spilt open.

- 1 **Never use second-hand water inlet hose.**

Cleaning the detergent dispenser

If there is a buildup of residual detergent or additives, or if the softener compartment is not rinsed out well enough, it may be helpful to clean the dispenser.

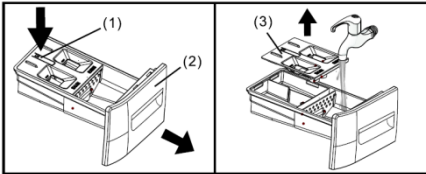


1. Open the detergent dispenser tray fully. Press down on the drawer catch (1) and pull the tray (2) from the washer housing.
2. Remove the liquid detergent cover (3) by grasping it and pulling it upwards from the detergent dispenser tray.
3. Clean the liquid detergent cover and the detergent dispenser tray by holding it under running water. Lightly wipe away any remaining detergent residue.
4. Attach the liquid detergent cover and slide the detergent dispenser tray back in place and close the tray securely.

Tip: Do not operate the washer without the detergent dispenser tray in place. Always keep the tray completely closed.

Cleaning the mesh filter in the water supply hose

 
1. Close water tap and unscrew the water inlet hose.




2. Clean the mesh filter at the hose's end carefully with a fine brush.



3. Now unscrew the inlet hose on the back of the washer by hand. Pull out the mesh filter from the valve on the back of the washer with pliers and carefully clean it.

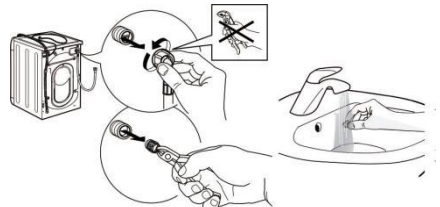

4. Insert the mesh filter again. Connect the inlet hose to the water tap and washer again. Do not use a tool to connect the inlet hose. Open the water tap and check that all connections are tight.

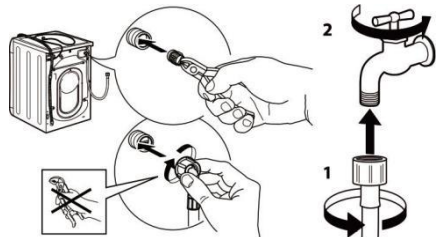

Care and maintenance

Cleaning the drain pump

1 WARNING

RISK OF SCALDING

Risk of hot water injury to skin!


 
 
Allow the water to cool down prior to actuating the emergency door lock release.

You are responsible for ensuring all safety precautions are followed when draining water from washer and/or manually opening the washer door.

It may be necessary to clean the washer drain pump if the washer fails to drain (sound of the water being pumped from the washer cannot be heard when the washer should be draining and other nearby drains, such as a sink, are draining properly).


The washer pump can become blocked by loose debris (a good reason to check the drum and remove any visible debris after each load). Fabrics that give off large amounts of fluff may also cause blockage.

To access the washer drain pump, the service cover must first be opened (see steps below). With the service cover opened, proceed as follows:


1. If the washer has not been drained, try to drain it now. Turn the wash cycle selector knob to the **Spin**  cycle, press the **SPEED**  button to set the spin cycle is turned off (all spinning speed value indicator light go out on the display), then press the **Start/Pause**  button. Wait a few moments to let the cycle drain the water from the drum. If the pump is totally blocked, the water will be unable to drain and the cycle will end.
2. Shut off the tap so that no more water flows in and has to be drained. Switch the appliance off. Unplug the power plug.
3. Open the drain filter cover.




4. Use the pull-out drain hose located in the pump access opening to drain the remaining water into a suitable container (up to 5.3U.S.gallon/20 liters of water may be drained). Pull the sealing cap from the hose and lay the hose over the side of the container and allow the water to finish draining from the drum. When finished, replace the sealing cap into the end of the hose and restore the hose to its storage location.

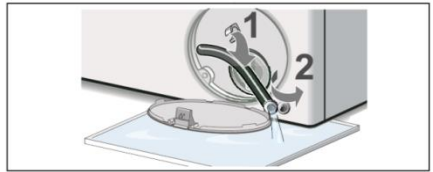

5. Turn the pump cover counterclockwise to remove it. A small amount of residual water may flow out when the cover is removed. Clean the interior of the pump housing, removing any debris or foreign objects. Check to be sure the impeller where at the back of the pump housing can now turn freely. Remove any lint, debris or detergent residue from the threads of the pump cover and the pump cover housing. Replace the pump cover by screwing tightly into position. Handle must be vertically.

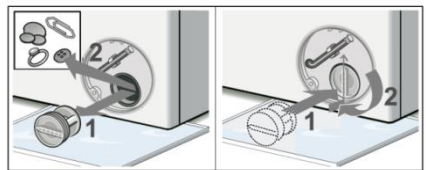

6. Close the drain filter cover. Wipe up any spilled water.

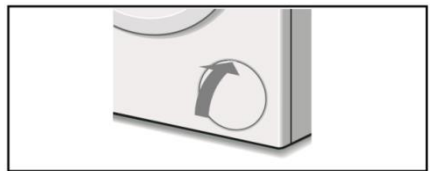

Troubleshooting

Your washer could occasionally fail to work. Before contacting the service center, make sure that the problem cannot be solved easily using the following list

Problem	Possible cause / solutions
The machine does not switch on	<ul style="list-style-type: none"> The appliance is not plugged into the socket fully, or not enough to make contact. There is not power to the socket, or the fuse has blown in the mains plug.
The wash cycle does not start	<ul style="list-style-type: none"> The door is not closed properly. The ON/OFF button has not been pressed. The START/PAUSE ▷ button has not been pressed. The water tap has not been turned on to allow water to flow into washer. A delayed start has been set.
The machine does not fill with water or "E02" in the display	<ul style="list-style-type: none"> The water inlet hose is kinked. The water inlet hose is not connected to the water supply. The water pressure is too low. The water tap has not been turned on to allow water to flow into the machine. There is no water supply to the house. The inlet valve filter is blocked. The START/PAUSE ▷ button has not been pressed.
The machine continuously fills with water and continually drains away or Water left in the drum or Stuck on wash	<ul style="list-style-type: none"> The top of the drain hose is too low – It must be fitted at a height between 65 and 100 cm from the floor (see "Installation"). The drain hose is connected incorrectly to the sink trap allowing water to run into the machine, the drain hose must be positioned higher than the bottom of the sink to prevent water flowing down the drain hose.. The end of the drain hose has been pushed too far down the standpipe, the "U" bracket should be fitted 100mm from the end of the drain hose.
The machine does not drain or spin or "E03" in the display	<ul style="list-style-type: none"> The pump filter is blocked. The drain hose is kinked (see "Installation"). New Installation – The blanking cap or spigot has not been removed if connected under a sink. The drain hose or sink trap is blocked.
The machine does not spin	<ul style="list-style-type: none"> The spin cycle is turned off (all spinning speed value indicator light go out on the display).
The program takes too long	<ul style="list-style-type: none"> Program times will vary due to water pressure, the incoming water temperature and if the wash load goes out of balance. This will increase the program times accordingly (see "The machine wont spin properly" next page).
The machine vibrates a lot during the spin cycle	<ul style="list-style-type: none"> The feet have not been adjusted, enabling the machine to rock. New Installation – Either the Transit Bolts including the plastic spacer, or the Polystyrene Packaging have not been removed when installing the machine. The washer is trapped between cabinets and/or walls. The load is in a slight out of balance condition and the washer is spinning, but at a lower speed.
ONE TOUCH wash cycle does not activate	<ul style="list-style-type: none"> After switching on the washer a cycle other than ONE TOUCH wash cycle was activated. Switch the machine off and press the ONE TOUCH button.
The machine is noisy	<ul style="list-style-type: none"> There will always be some motor, pump and drum noise during spin.

Troubleshooting

Problem	Possible cause / solutions
The machine wont spin properly	<ul style="list-style-type: none"> • Out of Balance detected when attempting to go into a spin cycle – If this happens the washer will continue to try to repeat the distribution of the load required before the machine will go into higher spin speeds – This will increase the program time accordingly. This is a safety feature to prevent damage. Out of Balance can be caused by washing a single heavy item (eg down, quilt, etc). – Try the programme again using a different load.
The machine leaks from the dispenser	<ul style="list-style-type: none"> • The dispenser drawer is blocked with detergent and requires cleaning. • The water pressure is too high and requires turning down – turn down the tap on the water supply pipe slightly and try again. • The washer is tilting forwards – It must be level when in its final position.
The machine leaks (other than dispenser)	<ul style="list-style-type: none"> • The inlet hose is loose, check both the cabinet and tap ends . • The inlet hose is tight but still leaks, if so replace the rubber washers, or the inlet hose is missing the rubber washer. • The drain hose is not fixed in properly.
The machine smells	<ul style="list-style-type: none"> • The washer requires a service wash. Run a “Drum Clean” wash cycle with detergent and no laundry.
The machine door cannot be opened.	<ul style="list-style-type: none"> • The door will not open until the door lock indicator light goes out shortly after the program has finished.
The water level is too low when the machine is washing	<ul style="list-style-type: none"> • The water level is correct if it can be seen at the bottom of the door
There is too much foam	<ul style="list-style-type: none"> • The detergent is not suitable for machine washing (it should display the text “for washing machines” or “hand and machine wash” or the like). • Too much detergent was used – less detergent is required in soft water.
General	<ul style="list-style-type: none"> • Your washer contains sensors that monitor progress during the wash cycle (eg: Water level, Temperature, Out of balance loads, Wash time/progress). Normally, if your washer successfully completes the cycle, there is unlikely to be anything wrong!

Troubleshooting

In case of the following faults, the fault state will be detected by the microcomputer system, with the buzzer sounds issued and the following fault codes display:

Fault codes	Fault type	Possible cause / solutions
E02	No inlet water	<ul style="list-style-type: none">• Check whether the faucet is turned on? Whether the water supply is cut off? Whether the water inlet hose and the filter of the water inlet valve are blocked? and whether the water inlet hose of the washing machine is frozen? In such case, please contact the service center for repair.
E03	Abnormal water drainage	<ul style="list-style-type: none">• Clean the pump filter.• Check whether the drain hose is bent, twisted or blocked? If the fault still exists, please contact the service center for repair.
U4	Door lock malfunction	<ul style="list-style-type: none">• Close the door again, and then press the START/PAUSE ▷ button to restart the program. If the fault still exists, please contact the service center for repair.
H	The temperature in the drum is high	<ul style="list-style-type: none">• Press the START/PAUSE ▷ button to suspend the washing machine operation and wait for several minutes. When the temperature in the drum drops to a safe range and the fault code on the display is removed, press the START/PAUSE ▷ button to continue the rest of the program..
EXX	Other faults	<ul style="list-style-type: none">• Turn the washing cycle selector knob to the “OFF” position to turn off the power supply, unplug the power cord, and contact the service center for repair as soon as possible..

Note: Be sure to check the fault cause and eliminate the fault before pressing the **START/PAUSE** ▷|| button again. If the fault code is removed, the washer will continue to run, and if the fault code still exists, please unplug the power cord and call our customer service center for help as soon as possible.

Remember, you will be charged for a service call for problems caused by incorrect installation, as indicated on pages 6 to 12.

Not emptying contents from pockets may cause pump or drain hose blockages, or may damage the machine. Do not wash items which do not have a wash label, or wash items that are not intended as machine washable.

Product fiche

(a) Suppliers name or trade mark: New World

(b) Suppliers mode identifier: NWWW814W

Parameter	Value		Parameter	Value		
Rated capacity ^(b) (kg)	8,0		Dimensions in cm ^(a) , ^(c)	Height	85	
				Width	60	
				Depth	52	
Energy efficiency index ^(b) (EEI _w)	60,0		Energy efficiency class ^(b)	B ^(d)		
Washing efficiency index ^(b)	1,031		Rinsing effectiveness(g/kg) ^(b)	5,0		
Energy consumption in kWh per cycle, based on the eco 40-60 programme at a combination of full and partial loads. Actual energy consumption will depend on how the appliance is used.	0.545		Water consumption in litre per cycle, based on the eco 40-60 programme at a combination of full and partial loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water.	46		
Maximum temperature inside the treated textile ^(b) (°C)	Rated capacity	35	Weighted remaining moisture content ^(b) (%)	59,9	Rated capacity	58,00
	Half	30			Half	60,00
	Quarter	20			Quarter	62,00
Spin speed ^(b) (rpm)	Rated capacity	1400	Spin-drying efficiency class ^(b)	C		
	Half	1400				
	Quarter	1400				
Programme duration ^(b) (h:min)	Rated capacity	3:35	Type	free-standing		
	Half	2:48				
	Quarter	2:48				
Airborne acoustical noise emissions in the spinning phase ^(b) (dB(A) re 1 pW)	76		Airborne acoustical noise emission class ^(b) (spinning phase)	B		
Off-mode (W) (if applicable)	0,5		Standby mode (W) (if applicable)	---		
Delay start (W) (if applicable)	4,00		Networked standby (W) (if applicable)	---		
Minimum duration of the guarantee offered by the supplier (a),(c):				6months		
This product has been designed to release silver ions during the washing cycle					NO	
Additional information(a),(c): Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (1)(b) is found: (a) this item shall not be considered relevant for the purposes of Article 2(6) of Regulation (EU)2017/1369. (b) for the eco 40-60 programme. (c) changes to this item shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369. (d) if the product database automatically generates the definitive content of this cell, the supplier shall not enter these data.						
(1)Commissions Regulation (EU) 2019/2023 of 1 October 2019 laying down ecodesign requirements for household washing machines and household washer-dryers pursuant to Directive 2009/125/EC of the European Parliament and of the Council, amending Commission Regulation (EU) No 1275/2008 and repealing Commission Regulation (EU) No 1015/2010(see page 285 of this Official Journal).						

Product fiche

Entry method for new standard energy efficiency (EN60456:2016 + FprAA:2020)

Eco 40-60, (Parameters are not adjusted by default)

8kg BLDC	20 °C	Cotton	Wool	Quick wash
Rated capacity / kg	2	8	1	1
Program duration (h:min)	0:39	0:57	0:50	0:15
Energy consumption (Kwh/cycle)	0.24	1.25	0.20	0.10
Water consumption (L/cycle)	65	80	70	40
Max temperature / °C	20	55	35	35
RMC	75%	70%	85%	75%
Spinning speed / rpm	700	900	500	700

Product fiche

- That the Eco 40-60 program is able to clean normally soiled cotton laundry declared to be washable at 40 °C or 60 °C, together in the same cycle, and that this program is used to assess the compliance with the EU eco-design legislation;
- That the most efficient programs in terms of energy consumption are generally those that perform at lower temperatures and long duration;
- That noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content;
- The values given for programs other than the Eco40-60 program and the wash and dry cycle are indicative only.

PARAMETER	UNIT	B
Rated capacity for the eco 40-60 programme, at 0,5 kg intervals (c)	kg	8,0
Energy consumption of the eco 40-60 programme at rated capacity ($E_{w,full}$)	kWh/cycle	0,905
Energy consumption of the eco 40-60 programme at half rated capacity ($E_{w,1/2}$)	kWh/cycle	0,518
Energy consumption of the eco 40-60 programme at quarter rated capacity ($E_{w,1/4}$)	kWh/cycle	0,175
Weighted energy consumption of the eco 40-60 programme (E_w)	kWh/cycle	0,545
Standard energy consumption of the eco 40-60 programme (SCE_w)	kWh/cycle	0,909
Energy Efficiency Index (EEL_w)	—	60,0
Water consumption of the eco 40-60 programme at rated capacity ($W_{w,full}$)	L/cycle	60,0
Water consumption of the eco 40-60 programme at half rated capacity ($W_{w,1/2}$)	L/cycle	48,0
Water consumption of the eco 40-60 programme at quarter rated capacity ($W_{w,1/4}$)	L/cycle	30,0
Weighted water consumption (W_w)	L/cycle	46
Washing efficiency index of the eco 40-60 programme at rated capacity (I_w)	—	1,031
Washing efficiency index of the eco 40-60 programme at half rated capacity (I_w)	—	1,031
Washing efficiency index of the eco 40-60 programme at quarter rated capacity (I_w)	—	1,031
Rinsing effectiveness of the eco 40-60 programme at rated capacity (I_R)	g/kg	5,0
Rinsing effectiveness of the eco 40-60 programme at half rated capacity (I_R)	g/kg	5,0
Rinsing effectiveness of the eco 40-60 programme at quarter rated capacity (I_R)	g/kg	5,0
Programme duration of the eco 40-60 programme at rated capacity (t_w)	h:min	3:35
Programme duration of the eco 40-60 programme at half rated capacity (t_w)	h:min	2:48
Programme duration of the eco 40-60 programme at quarter rated capacity (t_w)	h:min	2:48
Temperature reached for minimum 5 min inside the load during the eco 40-60 programme at rated capacity (T)	°C	35
Temperature reached for minimum 5 min inside the load during the eco 40-60 programme at half rated capacity (T)	°C	30
Temperature reached for minimum 5 min inside the load during the eco 40-60 programme at quarter rated capacity (T)	°C	20
Spin speed in the spinning phase of the eco 40-60 programme at rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at half rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at quarter rated capacity (S)	rpm	1400
Weighted remaining moisture content (D)	%	59,9
Airborne acoustical noise emissions during eco 40-60 programme (spinning phase)	dB(A) re 1	76
Power consumption in 'off mode' (P_o) (if applicable)	W	0,50
Power consumption in 'standby mode' (P_{sm}) (if applicable)	W	—
Does 'standby mode' include the display of information?	—	No
Power consumption in 'standby mode' (P_{sm}) in condition of networked standby (if applicable)	W	—
Power consumption in 'delay start' (P_{ds}) (if applicable)	W	4,00

X. Guarantee

Activate your 24 month guarantee

Thank you for choosing New World. Your new product is guaranteed against faults and breakdowns for 24 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.newworldassist.co.uk

Or call 0333 3052263

Your New World Guarantee

This product is guaranteed for 24 months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- New World disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we use your data please refer to the guarantee registration material or visit www.newworldassist.co.uk



